

# How to send or receive a text or picture Message with the Kyocera DuraForce (E6560)

## Instructions:

1. From the home screen, tap **Messaging**.
2. Your message inbox will be displayed.
  - **Send a message:** Tap **+** to create a new message. Enter the desired text, and then tap **Send** (Envelope icon).  
NOTE: To add an attachment, tap the paperclip icon.
  - **View a message:** Tap a message from the inbox.
    - **Save an attachment:** Tap and hold the message, and then select **Save attachment**.
    - **Delete a message:**
      1. Tap and hold the message, and then tap **Delete**.
      2. A confirmation message will be displayed. Tap **Delete** to continue.
    - **Delete a conversation:**
      1. From the messaging inbox, tap and hold the desired message.
      2. Tap **Delete** (Trash icon).
      3. A confirmation message will be displayed. Tap **Delete** to continue.

## Troubleshooting tips

1. Verify your phone has at least 2 bars of signal strength, and a wireless data connection.
2. Turn your phone off and back on.
3. Restore the default message settings (**Messaging** >  > **Settings** >  > **Restore default settings**).