



Connecting the Chromebook to Wi-Fi

When the Chromebook first turns on, if it is not connected to a wireless network, you should see the following screen prompting you to choose a network. Click the network you would like to connect to.

If you do not have wireless access in your house, you can review [this document](#) with some options that may be available to you.

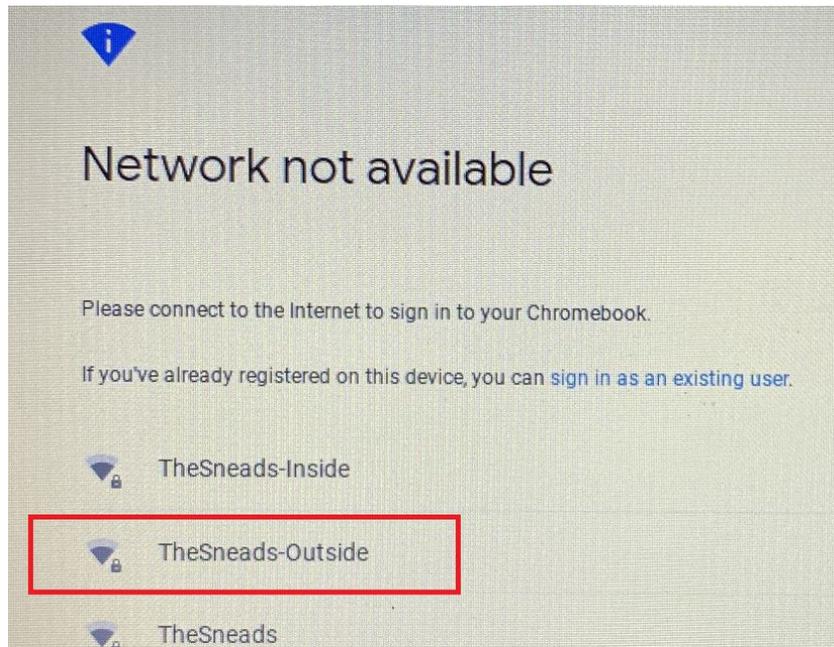


Once you choose a network to connect to, if that network requires a password you will be prompted to enter a password. Enter the password and click Connect.

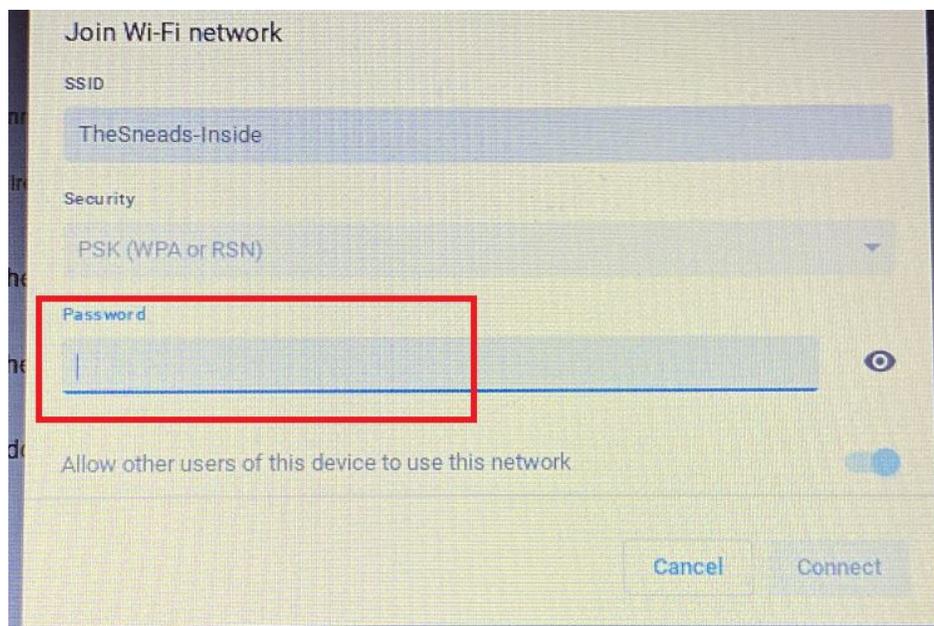


If your chromebook is already signed in and/or you wish to connect to a different network, follow these steps:


Click on the clock at the lower-right corner of the screen to open the “Quick Settings Panel.”

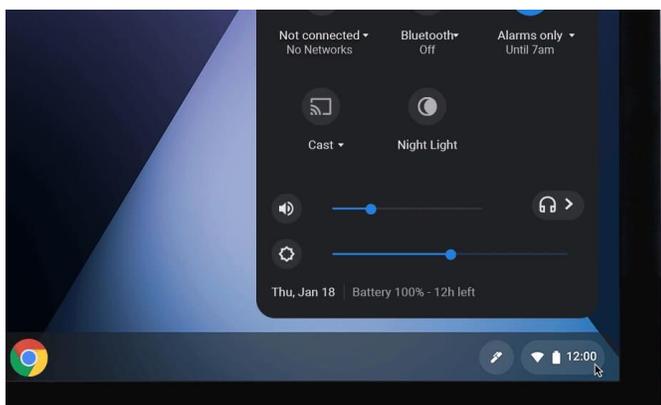

Click on the Wi-Fi icon. It may say “no network” or “network connected.”

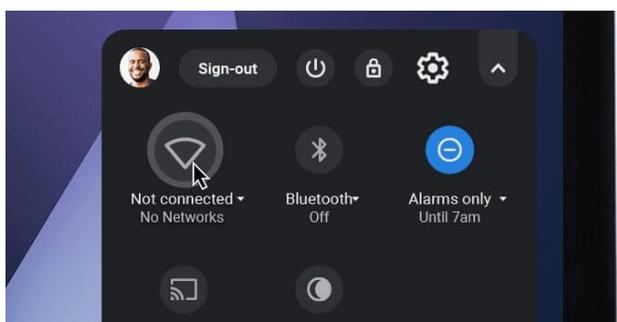

Select your Wi-Fi network.

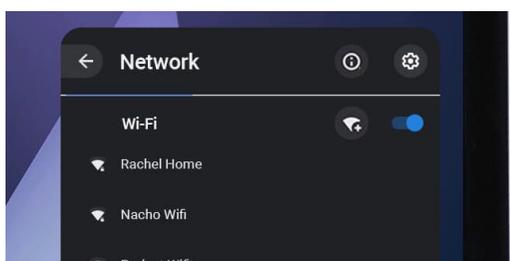

If prompted, enter the W-Fi password and click Connect.

